

Customer service department: Phone: +7(495)640.16.93, Phone/Fax: +7(495)640.17.71. E-mail: hotline@dna-technology.ru,

https://www.dna-technology.com

For research use only

Clopidogrel Pharmacogenetics REAL-TIME PCR Genotyping Kit

REF R1-H953-N3/4EU

Package: N (bulk solution)

General information

Intended use:

The **Clopidogrel Pharmacogenetics REAL-TIME PCR Genotyping Kit** is intended for detection and allelic discrimination of genetic polymorphisms associated with clopidogrel metabolism features.

The Clopidogrel Pharmacogenetics REAL-TIME PCR Genotyping Ki can be used in scientific research practice.

Method:

Real-time PCR followed by melting curve analysis, qualitative analysis.

Samples:

Peripheral blood.

DNA extraction:

The DNA-Technology's PREP-GS Genetics or PREP-RAPID Genetics extraction kits are recommended.

Features:

Two alleles are detected simultaneously in single tube.

In PCR-mix for each polymorphism the system for human genomic DNA amplification (IC) is included. It allows to control quantity of human DNA in amplification tube to exclude mistakes in genotyping.

We also recommend including in assay the negative control (C-) which is not supplied but very helpful for contamination control purposes. Use deionized water or sterile buffered saline instead of sample, starting from extraction step.

Devices:

The automatic analysis for **Clopidogrel Pharmacogenetics REAL-TIME PCR Genotyping Kit** is available on "DNA-Technology" made DTlite¹, DTprime² REAL-TIME Thermal Cyclers; the latest version of the software is available for download at https://www.dna-technology.com/software.

Time of analysis (excluding sample preparation procedure):

from 2.5 hours.

The number of tests:

48 (including positive and negative controls in each run).



The volume of control samples is intended for 12 tests.

Kit contents:

Reagent	Reagent Organoleptic parameters		Quantity	
PCR-mix:	Colorless transparent liquid			
1. ABCB1: 3435 C>T		960 μL	1 tube	
CYP2C19: 681 G>A *2 (P227P)		960 µL	1 tube	
CYP2C19: 636 G>A *3 (W212X)		960 µL	1 tube	
4. CYP2C19: -806 C>T *17		960 µL	1 tube	
PCR-buffer	Colorless transparent liquid	1.0 mL	2 tubes	
TechnoTaq MAX polymerase	Colorless transparent viscous liquid	100 μL	1 tube	
Mineral oil	Colorless transparent viscous oily liquid	1.0 mL	4 tubes	
Control sample (frequent homozygous)	Colorless transparent liquid	240 µL	1 tube	
Control sample (rare homozygous)	Colorless transparent liquid	240 µL	1 tube	

¹ - supported by 4S1, 4S2, 5S1, 5S2, 6S1, 6S2 instruments

² - supported by 4M1, 4M3, 4M6, 5M1, 5M3, 5M6, 6M1, 6M3, 6M6 instruments

Table 1 - Dye label detection channels corresponding to allelic variants and IC

PCR-mix	Fam	Hex	Rox	Cy5	Cy5.5
ABCB1: 3435 C>T	Т	С	-	IC	-
CYP2C19: 681 G>A *2 (P227P)	G	А	-	IC	-
CYP2C19: 636 G>A *3 (W212X)	G	Α	-	IC	-
CYP2C19: -806 C>T *17	С	Т	-	IC	-

Table 2 - Control samples for Clopidogrel Pharmacogenetics Genotyping Kit

Control sample	PCR mix to be controlled	Genotyping result
Frequent homozygous	ABCB1: 3435 C>T	Π
	CYP2C19: 681 G>A *2 (P227P)	GG
	CYP2C19: 636 G>A *3 (W212X)	GG
	CYP2C19: -806 C>T *17	СС
Rare homozygous	ABCB1: 3435 C>T	СС
	CYP2C19: 681 G>A *2 (P227P)	AA
	CYP2C19: 636 G>A *3 (W212X)	AA
	CYP2C19: -806 C>T *17	Π

Procedure

1 PCR amplification



- 1. The quantity of DNA to be analyzed must be greater than or equal to 1.0 ng per reaction (the Cp parameter for IC must not be more than 31.0). The violation of this requirement will affect the validity of analysis and void the manufacturer guarantee.

 2. The reagents and tubes should be kept away from direct sunlight!
- Mark the required number of 0.2 mL PCR-tubes for each polymorphism to be tested (one tube for each sample, negative control "C-" and each positive control "C+").

Example. If you need to test 5 samples, mark 8 tubes of each PCR-mix: 5 for the samples, 1 for the "C-" and 2 for the "C+". Total number of tubes – 32.

PCR tubes marking

	ABCB1: 3435 C>T	CYP2C19: 681 G>A *2 (P227P)	CYP2C19: 636 G>A *3 (W212X)	CYP2C19: -806 C>T *17
Sample 1	√	√	√	√
Sample 2	√	√	√	√
Sample 3	√	√	√	√
Sample 4	√	√	√	√
Sample 5	√	√	√	√
"C-"	√	√	√	√
"C+" (frequent homozygous)	√	√	√	√
"C+" (rare homozygous)	√	√	√	√

- **1.2** Vortex the tubes containing PCR-mix for 3-5 s, then spin for 1-3 s to collect the drops.
- 1.3 Add 20 µL of corresponding PCR-mix into the marked tubes (use a new pipette tip for each type of PCR-mix).
- 1.4 Vortex the tubes with PCR-buffer and TechnoTaq MAX polymerase for 3-5 s, then spin for 1-3 s to collect the drops.



TechnoTaq MAX polymerase must be stored at temperatures from minus 18°C to minus 22°C . Room temperature exposure is permitted only for a short time. Remove from freezer just prior to use and place on ice.

- **1.5** Prepare the mixture of PCR-buffer and TechnoTaq MAX polymerase. Mix in the separate tube:
 - 10×(N+1) µL of PCR-buffer;
 - 0.5×(N+1) µL of TechnoTag MAX polymerase;
 - N number of the marked tubes including "C-", "C+" (frequent homozygous), "C+" (rare homozygous).

Example: For simultaneous testing of 5 samples, 1 $^{\circ}$ C- $^{\prime\prime}$ and 2 $^{\circ}$ C+ $^{\prime\prime}$ (resulting number of marked tubes is 32), prepare mix of PCR-buffer and TechnoTaq MAX polymerase for 33 tubes, i.e. mix 330 μ L of PCR-buffer with 16.5 μ L of TechnoTaq MAX polymerase.

1.6 Vortex the tube for 3-5 s, then spin for 1-3 s to collect the drops.



The mixture of PCR-buffer and TechnoTaq MAX polymerase must be prepared just prior to use.

Add 10 μL of PCR-buffer and TechnoTaq MAX polymerase mixture into each PCR-tube.



Follow the steps listed in pp 1.8 - 1.14 within two hours after addition of PCR-buffer and TechnoTaq MAX polymerase mix to amplification mix.

- 1.8 Add one drop (~20 µL) of mineral oil in each PCR-tube.
- 1.9 Vortex the tubes with samples and "C+" for 3-5 s and spin down the drops by centrifuging on vortex mixer for 1-3 s.



1. In case of using **PREP-GS Genetics DNA Extraction Kit**. After vortexing centrifuge the tubes with the DNA preparation at RCF(g)16000 for one minute at room temperature (from 18 °C to 25 °C) to precipitate the sorbent. If, after isolation, the supernatant containing the isolated DNA was transferred to new tubes, centrifugation is carried out for 1-3 s in a vortex mixer.

Relative centrifugal force (RCF or g) depends on rotation frequency and rotor radius (Annex A). To establish if your centrifuge meets the requirements apply to the exploitation manual for centrifuge.

- 2. Open the cap of the tube, add DNA sample (or control sample), then close the tube before proceeding to the next tube to prevent contamination. Use filter tips. Close tubes tightly.
- 1.10 Add 5.0 µL of the DNA sample into each tube assigned to test samples (8 tubes for each sample).Do not add DNA into the "C-", "C+" tubes.
- 1.11 Add 5.0 μ L of negative control (C-), which passed all steps of DNA extraction procedure into corresponding tubes.
- 1.12 Add 5.0 μL of positive controls ("C+" (frequent homozygous), "C+" (rare homozygous)) into corresponding marked tubes.
- **1.13** Spin the tubes for 1–3 s to collect the drops.
- **1.14** Set the tubes to real-time PCR thermal cycler.
- **1.15** Launch the operating software for DT instrument¹. Add corresponding test², specify the number and ID's of the samples, positive and negative control samples. Specify the position of the tubes in the thermal unit (see 1.14) and run PCR.



The type of the positive and negative control tubes must be specified as "Sample".

Data collection and data analysis.

Registration and interpretation of the PCR results are held in automatic mode.

For samples containing a sufficient quantity of DNA for correct analysis, the software defines the genotype. The samples containing an insufficient quantity of DNA (less than 1.0 ng per reaction or Cp>31.0) will be analyzed as N/A (uncertain result).

Control samples ("C+" (frequent homozygous), "C+" (rare homozygous)) must have the corresponding genotypes (table 2).

¹ Please, apply to Operation Manual for DTprime and DTlite Real-Time PCR instruments PART II.

² Instructions for uploading "files with test parameters" can be found on "DNA-Technology's" website https://www.dna-technology.com/assaylibrary.

Storage, shipping and handling requirements

All components of the **Clopidogrel Pharmacogenetics REAL-TIME PCR Genotyping Kit**, except the TechnoTaq MAX polymerase, must be stored at temperatures from 2 °C to 8 °C during the storage period. PCR-mix must be stored at temperatures from 2 °C to 8 °C and out of light during the storage period. The TechnoTaq MAX polymerase must be stored at temperatures from minus 18 °C to minus 22 °C during the storage period.

Excessive temperature and light can be detrimental to product performance.

The kit has to be transported in thermoboxes with ice packs by all types of roofed transport at temperatures corresponding to storage conditions.

Transportation of the kit, except the TechnoTaq MAX polymerase, is allowed in termobox with ice packs by all types of roofed transport at temperatures from 2 °C to 25 °C but no more than 5 days and should be stored at temperatures from 2 °C to 8 °C immediately on receipt.

It is allowed to transport the TechnoTaq MAX polymerase in termobox with ice packs by all types of roofed transport at temperatures up to $25~^{\circ}\text{C}$ but no more than 5 days and should be stored at temperatures from minus $18~^{\circ}\text{C}$ to minus $22~^{\circ}\text{C}$ immediately on receipt.

Shelf-life – 12 months if all the conditions of transportation, storage and operation are met.

Contact our customer service department regarding quality issues with the kit:

8 800 200-75-15 (toll-free call for Russia)


+7 (495) 640-16-93 (chargeable call for CIS and foreign countries)

E-mail: hotline@dna-technology.ru, https://www.dna-technology.com

Address: "DNA-Technology" LLC, 117585, Russia, Moscow, int. ter. Municipal District Chertanovo Severnoye, Varshavskoye shosse, 125 Zh, building 5, floor 1, office 12

Key to symbols

1	Temperature limit	[]i	Consult instructions for use	REF	Catalogue number
	Use-by date	**	Manufacturer	LOT	Batch code
<u></u>	Date of manufacture	Σ	Contains sufficient for <n> tests</n>	>	Keep away from sunlight
\triangle	Caution	HON	Non-sterile	淞	

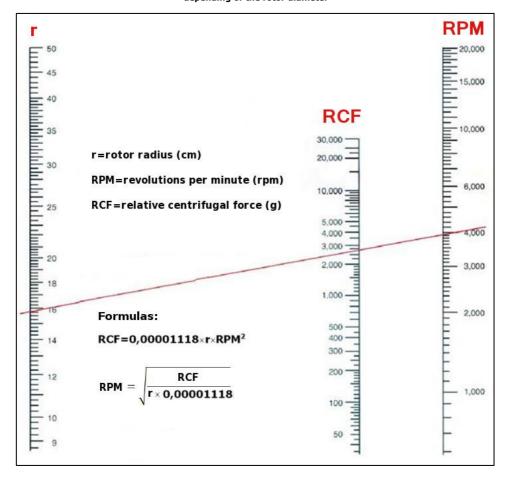

Number: 386-5 2022-10-20